


# Operating Instructions

# TAIJI HOTCABI HC-6 Mini Cabi Towel Warmer

### **Contents**:

- 1. Introduction
- 2. General description and operating principal
- 3. Precautions for safety use
- 4. Names of parts
- 5. Inspection and preparations before use
- 6. Safety device and instructions for use
- 7. After use
- 8. After-sale service
- 9. Product specifications
- 10. Accessories

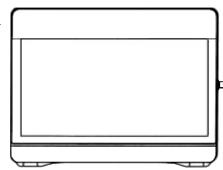



# CAUTION



Read the instructions before using the machine.

Caution: Before attempting to connect or operate this product, please read the label on the bottom.



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER SERVICEABLE PARTS INSIDE. REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



The lightning flash with arrowhead symbol, within an equilateral triangle, is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

The serial number of this product may be found on the bottom of the product. You should note the serial number of this product in the space provided and retain this booklet as a permanent record of your purchase to aid identification in the event of theft.

Model No.	:	
Serial No.	:	

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE

### 1. Introduction:

- To use the product correctly and safely, you are advised to carefully read these instructions and fully understand them before use.
- Keep this booklet at hand for quick references after reading.
- This booklet covers mainly safety precautions, the names of parts, instructions for use, after-sale service, and product specifications.
- Failure to observe the precautions given in this booklet may result in death and physical injuries. Do not to use the product in a manner which dose not conform to the instructions given herein.
- Specifications and the product are subject to change without any obligation on the part of the manufacture.

#### 2. General description and operating principal:


This HOTCABI HC-6 Mini Cabi towel warmer is designed to keep pre-moistened towels at warm condition for inside use. By a heater and a thermostat installed inside the product, it keeps towels at constant temperature between  $158^{\circ}$  F ( $70^{\circ}$ C) and  $176^{\circ}$  F ( $80^{\circ}$ C) when room temperature at  $86^{\circ}$  F ( $30^{\circ}$ C). Do not use the product for other than intended use. Do not use outdoors.


# 3. Precautions for safety use:

3. Precautions for sa	<u>ifety use:</u>
Do not disassemble:	Do not disassemble, repair nor reform the product unless qualified electric engineer. It may cause unexpected flashing or electric shock.
Connect ground terminal:	The product is equipped with a power plug with ground terminal. Connect ground terminal firmly. No ground connection or improper connection may cause an electric shock. Do not ground to gas piping or water piping.
No water:	The product is not water-proof construction. Do not sink the product into water or do not expose water to the product. It may cause an electric shock.
Check and clean	Check regularly power plug pin points and surface of plug connecting face as no dust. Insert power plug firmly to power outlet. Dust on power plug pin points or surface of plug connecting face or improper connection may cause fires and an electric shock.
Do not damage power cord:	Do not damage power cord. Do not alter, tug, tie or pressurize power cord. It may destroy inside the power cord and may cause fires and an electric shock. Do not place power cord proximately fire place. If the supply cord is damaged, it must be replaced by manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
Do not use outdoors.	Do not use the product outdoors. Rain, snow or fog may cause fires and an electric shock.
Do not leave:	Please dispose of the product properly. Consult to local dealer or public organization for disposal if necessary. Disposal charge is not any obligation on the part of the manufacture.
Do not put heavy items:	Do not put heavy items or pressurize on door edge while opened. It may cause door drop and any injuries by the product tumbling.
No humidity:	Do not place the product at humid place. It may cause an electric shock due to bad electrical insulation and leakage.
Use independent outlet:	Do not plug in too many leads into a single power outlet. It may cause fires.
Do not bend power plug pins	Do not bend power plug pins to secure connection to power outlet. It may cause fires due to improper connection.
Pull out the plug with holding:	When disconnecting power plug, hold the plug, do not pull the power cord. It may cause of deformation of power plug pin points. It may cause fires and an electric shock.
Do not touch with wet-hand:	Do not touch or operate power plug, power switch and other electrical parts with wet-hand. It may cause an electric shock.
Do not drop	Do not drop the product or give strong pressure to the product. It may cause mechanical/electrical problems and fires.

Dispose of pack-	Dispose of packing plastic bag immediately after until the
ing plastic ba	product. To prevent danger of suffocation, keep this plastic
immediately:	bag away from babies and children.
Do not place	Do not place heavy items and liquid bottles etc. on the main
heavy items	cabinet. They may cause to scratch and rust surface of the
	product. Also they may cause an electric shock and other
G G	physical injuries by drop or tumbling.
Use towels in	Use pre-moistened towels in polyethylene bag that resists
polyethylene bag:	heat minimum 248° F (120°C). Naked towels may dry
	faster and change the color. In case naked towels are used,
U	squeeze water firmly (approx. 2.5 times weight of dry
	condition), then insert into polyethylene bag and seal up the
G	opening. Do not use plastic (vinyl) bag as weak heat
	resistance.
Use basket:	Keep towels with basket. If not, it may cause towel color
	change by polyethylene bag melting with heat from inner
V	box surface.
Do not storage too	Do not storage too many towels to prevent touching to inner
many towels:	box surface where it may excess over $212^{\circ}$ F ( $100^{\circ}$ C).
	Polyethylene bag may be melted and it cause of changing
	towel color.
Do not storage	Do not storage same towel longer: It may cause of changing
longer:	towel color and occurring smell.
	to wer color and cocarring smen.
High	During operating, inner box surface, basket, door back board
temperature: ^	are extremely hot. Be careful fingers and hand from burns
will be the state of the state	when putting or removing hot towels.
Remove drain	Remove drain water before overflow. Take off the drain
water:	tray by sliding carefully and remove water.
Wipe up water:	In case no use for more than a day, remove all towels and
wipe up water.	basket, and wipe up any waterdrop and moisture in the
0.0	inner box and on the basket. If any waterdrop and
	moisture in the inner box are left, it may cause to generate
	bad smell.
Attention	• This appliance can be used by children aged from 16 years
required	and above and persons with reduced physical, sensory or
for using:	mental capabilities or lack of experience and knowledge if
ior using.	they have been given supervision or instruction concerning
•	use of the appliance in a safe way and understand the
	hazards involved.  • Children shall not play with the appliance
	• Children shall not play with the appliance.
	• Cleaning and user maintenance shall not be made by
	children without supervision.


# 4. Names of parts:

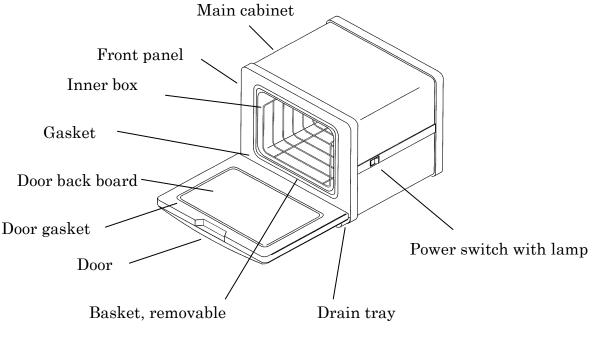

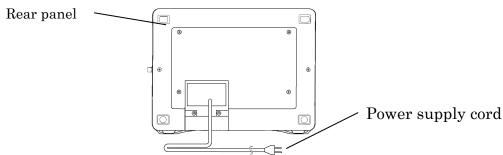

#### 5. Inspection and preparations before use:

- ♦ Check the operating instructions booklet and standard accessories are accompanied with the product.
- ♦ Choose a proper place for the product. The place should be stable and flat level, well-ventilated place and away from heat sources, such as gas burner and cooking range, and free from exposure to direct sunlight. Keep the unit at least 2 ft. (60cm) away from them. A place should not so humid, not exposed to water.
- ♦ Set the product horizontally on suitable places as above.
- ♦ Set the drain tray horizontally into its hollow under the door.
- ♦ Use an independent power outlet. Be sure to plug in the power plug to a power outlet of 110-120V AC 15A minimum or 220-240V AC 7.5A minimum, to which nothing else is connected.

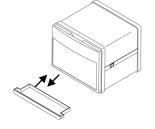

♦ The product is cleaned before the shipment. However, when using it for the first time or after a long period of non-use, clean inside of the product.

#### 6. Safety device and instructions for use:

SAFELY DEVICE: WHEN THE TEMPERAURE OF THE PRODUCT INSIDE EXCEEDES THE UPPER LIMITS ABNORMALLY BY ANY MEANS, THE THERMAL FUSE BLOWS OUT THE ELECTRIC CIRCUIT. WHEN IT WORKS TURN OFF AND TAKE OFF THE POWER PLUG FROM POWER OUTLET AND CONSULT TO TAIJI PRODUCTS DEALER OR OUR SERVICE FACILITIES.

- Be sure that power switch is "OFF" position.
- Connect the power plug to the power outlet. Be sure that power plug must be inserted correctly in position.
- Open the door and take off basket.
- Place towels on basket, then insert basket with towels into inner box. Do not place towels too many to prevent direct contact to inner box surface.
- Close the door firmly.
- Turn on the power. Power switch lamp is lit while power is supplied.

#### **WARNINGS:**

TOWELS, STEAM, BASKET AND INSIDE SURFACE ARE HOT AND DANGEROUS. USE EXTREME CAUTION WHEN PUTING OR REMOVING HOT TOWELS OR BASKET FROM THE PRODUCT. ALWAYS USE PROTECTIVE GLOVES WHEN HANDLING HOT TOWELS AND BASKET. CARELESS OR INATTENTIVE HANDLING CAN RESULT IN BURNS OR OTHER SERIOUS PHYSICAL INJURIES.

#### 7. After use:

- Cleaning and user maintenance shall not be made by children without supervision.
- Turn off the power. Power switch lamp is not lit while power is not supplied.
- Take off power plug from power outlet.
- After the product is cool down properly remove all towels and basket from inner box. Wipe up any waterdrop and moisture in the inner box by dry cloth etc.
- Wipe up any waterdrop and moisture on the basket.
- Take off drain tray by holding two ends of tray corners and pulling the tray forward. Remove water if necessary.
- Clean the product exterior using a dry cloth or damp cloth with mild detergent. Do not use cleansers containing solvents, benzene, abrasives or extremely hot water. (Suggestion: To dry and to prevent smell inner box, leave the door to open for a little while.) The product shall not be cleaned with a water jet.
- The product shall not be cleaned with a water jet.

#### **WARNINGS:**

PLEASE DO NOT KEEP IN YOUR HOTCABI TOWELS OR OTHER MATERALS WHICH CONTAIN OR SOAKED WITH OILS OR CHEMICALS. SOME OILS OR CHEMICALS USED IN THERAPIES MAY DAMAGE OR CRACK THE INSIDE OF YOUR HOTCABI OVER TIME IF NOT CLEANED OFF PROPERLY. IF YOU ARE USING SUCH CHEMICALS MAKE IT A RULE TO WIPE ALL PLASTIC PARTS DAILY WITH A SOFT CLOTH SOAKED IN A NEUTRAL DETERGENT SOLUTION DILUTED WITH HOT WATER AND THEN DRY OFF WITH A SOFT CLOTH. PLEASE NOTE THAT THE AREA IN AND AROUND THE DOOR IS ESPECIALLY VULNERABLE.


# 8. After-sale service:

For after sales service, call the store where you have purchased your towel warmer, or nearest TAIJI sales representative or TAIJI CO., LTD. in JAPAN.

FAX No. 81-44-329-5860 E-Mail overseas@taiji.co.jp

# 9. Product specifications:

# Circuit diagram

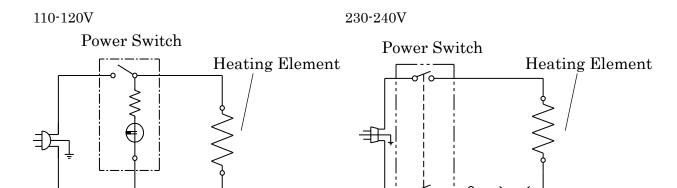

Thermal Fuse

Thermostats

Thermal Fuse Thermostats

# Specifications:

Model No.:	HC-6
Rated power supply:	Single phase 110-120V (UL) / 230-240V AC
	50-60Hz.
Consumption power:	110-120W
Temp. control:	By bimetal thermostat
Inner box temp. range:	158-176° F (70-80°C) at room temp. 86° F (30°C)
Safety device:	Thermal fuse
Insulator:	Glass wool
Outside dimensions:	300(W)x307(D)x230(H)mm
Inner box dimensions:	220(W)x220(D)x140(H)mm
Inner box capacity:	6 litters
Weight:	$4 \mathrm{~kg}$

### 10. Accessories:

Basket, removable x 1 pc., drain tray x 1 pc.

# ◆ TAIJI & CO., LTD.

8-2, Okawa-cho, Kawasaki-ku, Kawasaki-shi, Kanagawa, 210-0858 Japan

TEL 81-44-329-6338

FAX 81-44-329-5860

E-Mail overseas@taiji.co.jp

Web: <a href="http://www.taiji.co.jp/e">http://www.taiji.co.jp/e</a>